


Nesting Shopping Cart Assembly Instructions








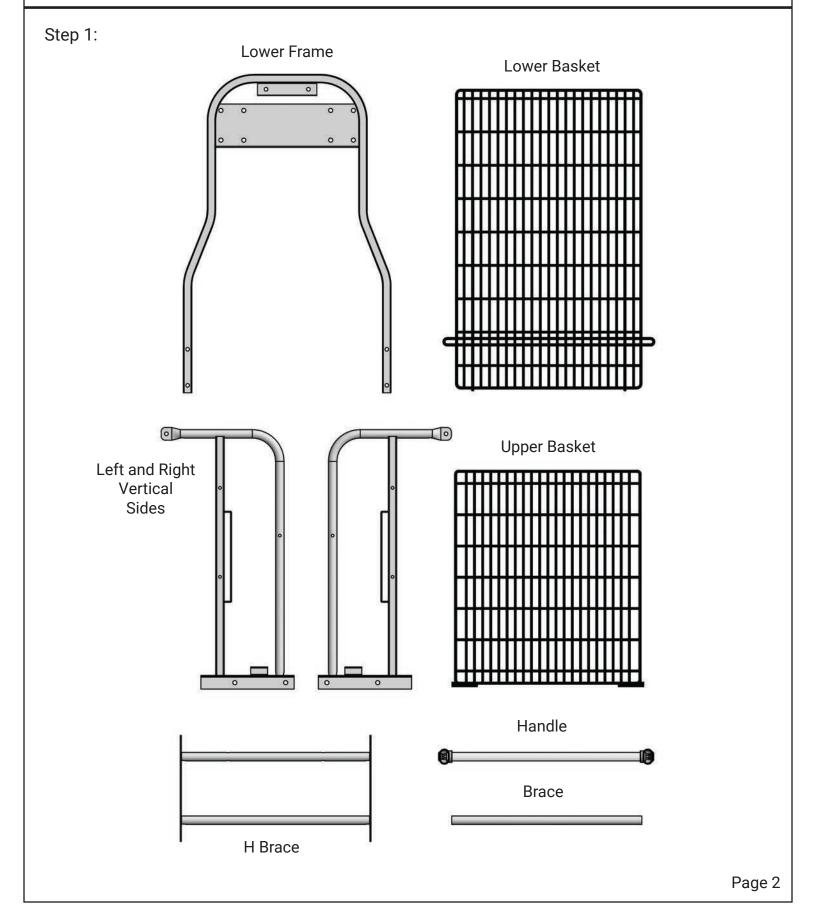


Step 2: Attach Vertical Sides to Lower Frame as shown.

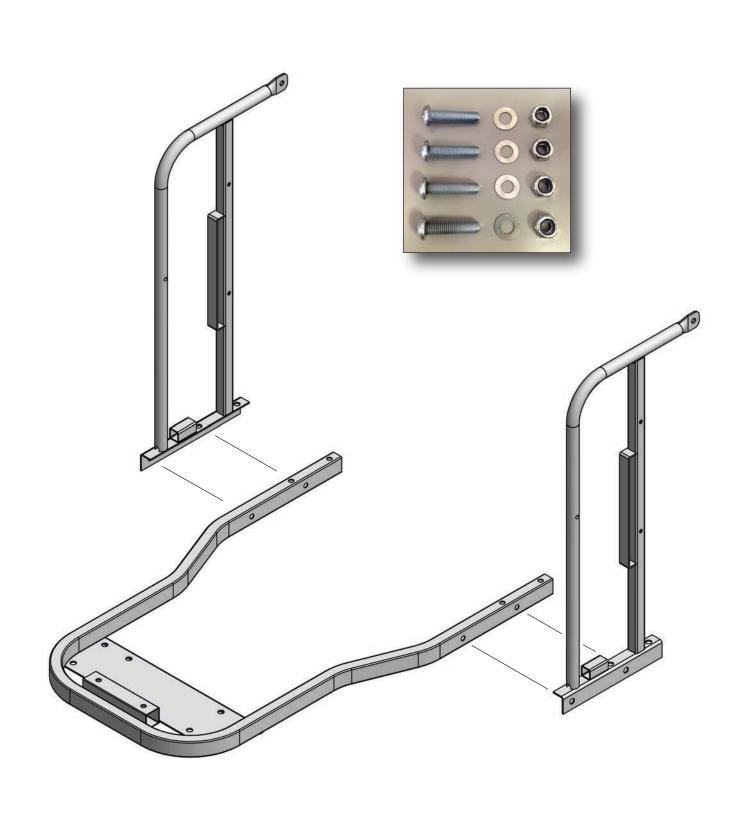



Step 3: Bolt the two Braces into position as shown. Place the H Brace into the rear position of the unit, holes facing up. This is used for the optional Child Seat.

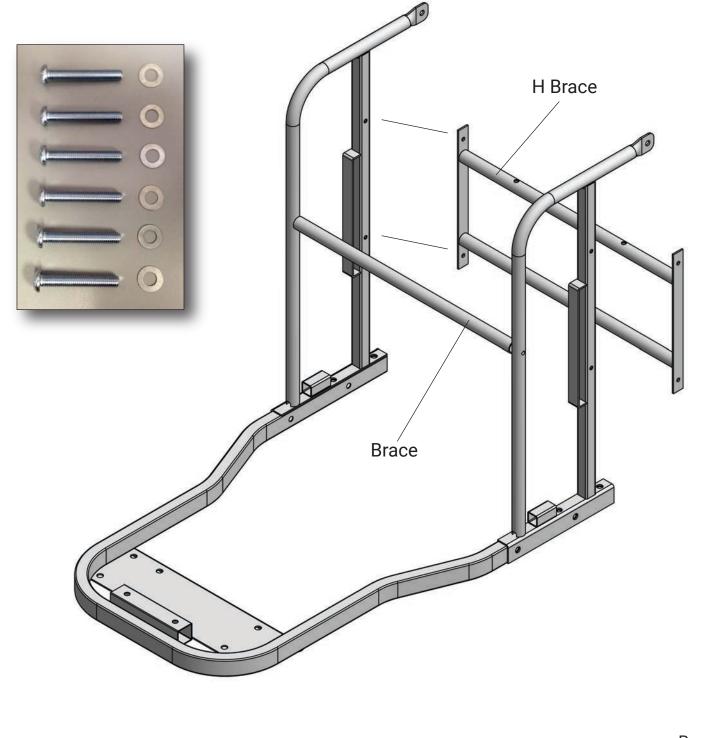



Step 4: Bolt the two swivel Casters to the front of the unit and bolt the two rigid Casters to the back of the unit as shown.





Step 5: Attach the two "J Shaped Bolts" to the front of the Lower Frame to secure Lower Basket to Lower Frame. Bolt and tighten in place. This will act as a hinge for the Lower Basket during the nesting process.





Step 6: Using the following Bolts, Washers, Nuts and Spacers, place the Upper Basket into position between the two Vertical Sides and fasten. See detail on next page.





Step 6 (continued): Using the following Bolts, Washers, Nuts and Spacers, place the Upper Basket into position between the two Vertical Sides and fasten. Bolt Spacer 0 Nut Washer 0



Step 7: Insert Handle into position over top of the Vertical Side ends. Fasten at each end.





Step 8: Enjoy the Nesting Shopping Cart!









Vertical Sides:

- 4 Medium Hex Key Bolts
- 4 Medium Flat Washers
- 4 Medium Locking Nuts

Braces:

- 6 Long Narrow Hex Key Bolts
- 6 Small Flat Washers

Upper Basket:

- 2 Long Hexagon Head Bolt
- 2 Large Flat Washers
- 2 Round Tube Spacers
- 2 Small Locking Nuts

Lower Basket:

- 2 J Shaped Bolts
- 2 Small Flat Washers
- 2 Small Locking Nuts

Hardware List:

Push Handle:

- 2 Push Handle Ends
- 2 End Cap Inserts

Front Swivel Casters:

- 8 Short Hex Key Bolts
- 8 Medium Flat Washers
- 8 Medium Locking Nuts

Rear Rigid Casters:

- 4 Long Hex Key Bolts
- 4 Medium Flat Washers
- 4 Medium Locking Nuts

Hardware Kit May Also Include:

- 2 Short Narrow Hex Key Bolts
- 2 Small Flat Washers
- 2 Small Locking Nuts
- For Optional Child Seat

Page 11

Please contact us if you have any questions or need replacement parts.

1494 Bell Mill Road, P.O. Box 456, Tillsonburg, ON, Canada, N4G 4J1



Phone: 519.688.0500 • Toll Free: 800.387.9355 Fax: 519.688.0563 • Online: www.wellmaster.ca